



When a sewing machine fills the majority of the opening of the sewing cabinet, then we may have options outside of our standard u-shaped insert to help fill in those smaller gaps. This is considered a filler or partial insert/inset.

All of our inserts are designed based on having any accessory tray removed from the machine. The standard is to have enough space on the right side of the cabinet opening to allow space for machine cords, to use on/off switch, and accommodate for the hand wheel to be pushed down into the cabinet. The insert is designed to be perfectly level with the free arm of the machine. If you have a top loading bobbin this may affect your use.

Left-side filler/partial pictured at left

HOW TO INSTALL YOUR CABINET FILLER/PARTIAL INSERT/INSET

INCLUDED WITH INSERT: *Cling ruler*

1. Remove any accessory trays surrounding free arm.
2. Raise or lower cabinet lift so free arm (at needle) is level with the top of cabinet. Insert will not fit properly if machine is too high. Call cabinet manufacturer for instructions on micro-adjusting lift.
3. Sometimes the machine will need to be moved on the lift in the cabinet to allow proper insert fit. If your machine is bolted to your cabinet lift, you may need to unbolt the machine.
4. Peel white backing off cling ruler, place on underside of insert. Ruler can be cut down with scissors to fit smaller inserts.
**Cling ruler may not work on left-side fillers.*
5. Place insert around machine and lay in cabinet.
6. Some fillers come with suction legs (see image above) to be placed on the cabinet lift wherever additional support is needed



Scan code at left to find instructional videos on our Sew Steady products