

Sew Steady®


ELEVATE YOUR CREATIVITY

FREE MOTION GLIDER INSTRUCTIONS FOR USE

1. Remove protective backing
2. Position so hole lines up with the needle of the sewing machine
3. Gently press onto sewing machine and/or extension table

- *12" X 18" removable teflon, hole pre-cut for thread*
- *Slick topside allows for easy fabric glide, great for free motion quilting*
- *Tacky underside secures to sewing machine and/or extension table*
- *Can be trimmed down with scissors*
- *Clean with warm water and air dry to revive*

www.sewsteady.com | 800-837-3261

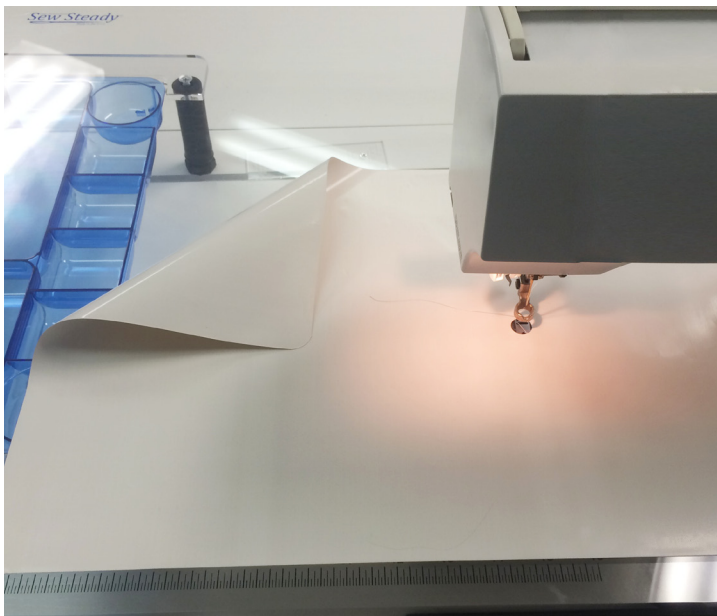

Sew Steady®

ELEVATE YOUR CREATIVITY

FREE MOTION GLIDER INSTRUCTIONS FOR USE

1. Remove protective backing
2. Position so hole lines up with the needle of the sewing machine
3. Gently press onto sewing machine and/or extension table

- *12" X 18" removable teflon, hole pre-cut for thread*
- *Slick topside allows for easy fabric glide, great for free motion quilting*
- *Tacky underside secures to sewing machine and/or extension table*
- *Can be trimmed down with scissors*
- *Clean with warm water and air dry to revive*

www.sewsteady.com | 800-837-3261