

Sew Steady®


ELEVATE YOUR CREATIVITY

GRID GLIDER INSTRUCTIONS FOR USE

1. Remove protective backing and save in tube for ease of storage
2. Position so needle is aligned with center of cut away square to allow for feed dogs up
3. Gently press onto extension table and sewing machine free arm

- 12" X 20" removable polyester, hole pre-cut for feed dogs
- Slick topside allows for easy fabric glide, great for free motion quilting
- Micro-suction technology secures to sewing machine and/or extension table
- Can be trimmed down with scissors
- Clean with warm water and air dry to revive

www.sewsteady.com | 800-837-3261

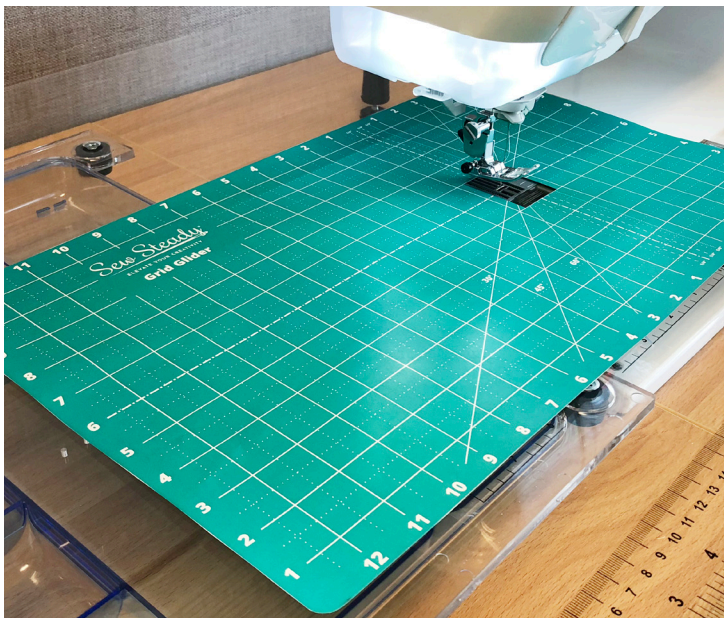

Sew Steady®

ELEVATE YOUR CREATIVITY

GRID GLIDER INSTRUCTIONS FOR USE

1. Remove protective backing and save in tube for ease of storage
2. Position so needle is aligned with center of cut away square to allow for feed dogs up
3. Gently press onto extension table and sewing machine free arm

- 12" X 20" removable polyester, hole pre-cut for feed dogs
- Slick topside allows for easy fabric glide, great for free motion quilting
- Micro-suction technology secures to sewing machine and/or extension table
- Can be trimmed down with scissors
- Clean with warm water and air dry to revive

www.sewsteady.com | 800-837-3261