

Table Lock Instructions

Photo A


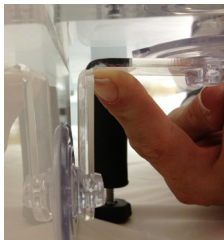


Photo B

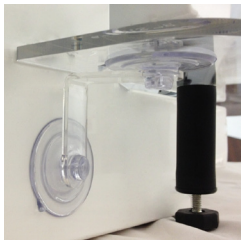

1. Install suction cups with suction facing the outside of the "L" shaped lock.
2. Install Table to machine
(see Table instructions provided)
3. Identify a smooth, flat surface on the underside of the Table, preferably near the left or back side of the machine, to secure Table Lock *(see Photo A)*
4. Push Table Lock onto the machine by pushing finger upward toward the Table and the machine *(see Photo B)*
5. Secure suction by pushing it flat onto the machine and then up onto the Table
6. To remove Table Lock and Table away from the machine, simply release the suction tab from the machine